


Interconnecting 2 FirePoint control panels

A FirePoint Input-Unit (FP2-IU) should be fitted adjacent to each control panel and connected as shown. The relay terminals should be connected to the "Trigger" terminals on the IU and the "Loop" terminals should connect to the other panels wiring loop.

Each FirePoint panel has "volt-free" normally-open relay contacts for triggering the Input Unit.

Each Firepoint Input Unit should be set to "address 0 (zero)" this will give pulsing, non-latching alarms when the other panel goes into fire condition, and will allow both Firepoint systems to reset automatically when the alarm condition is cleared. Also the Firepoint panel WON'T trigger the other panel when in "Walk-Test" mode.

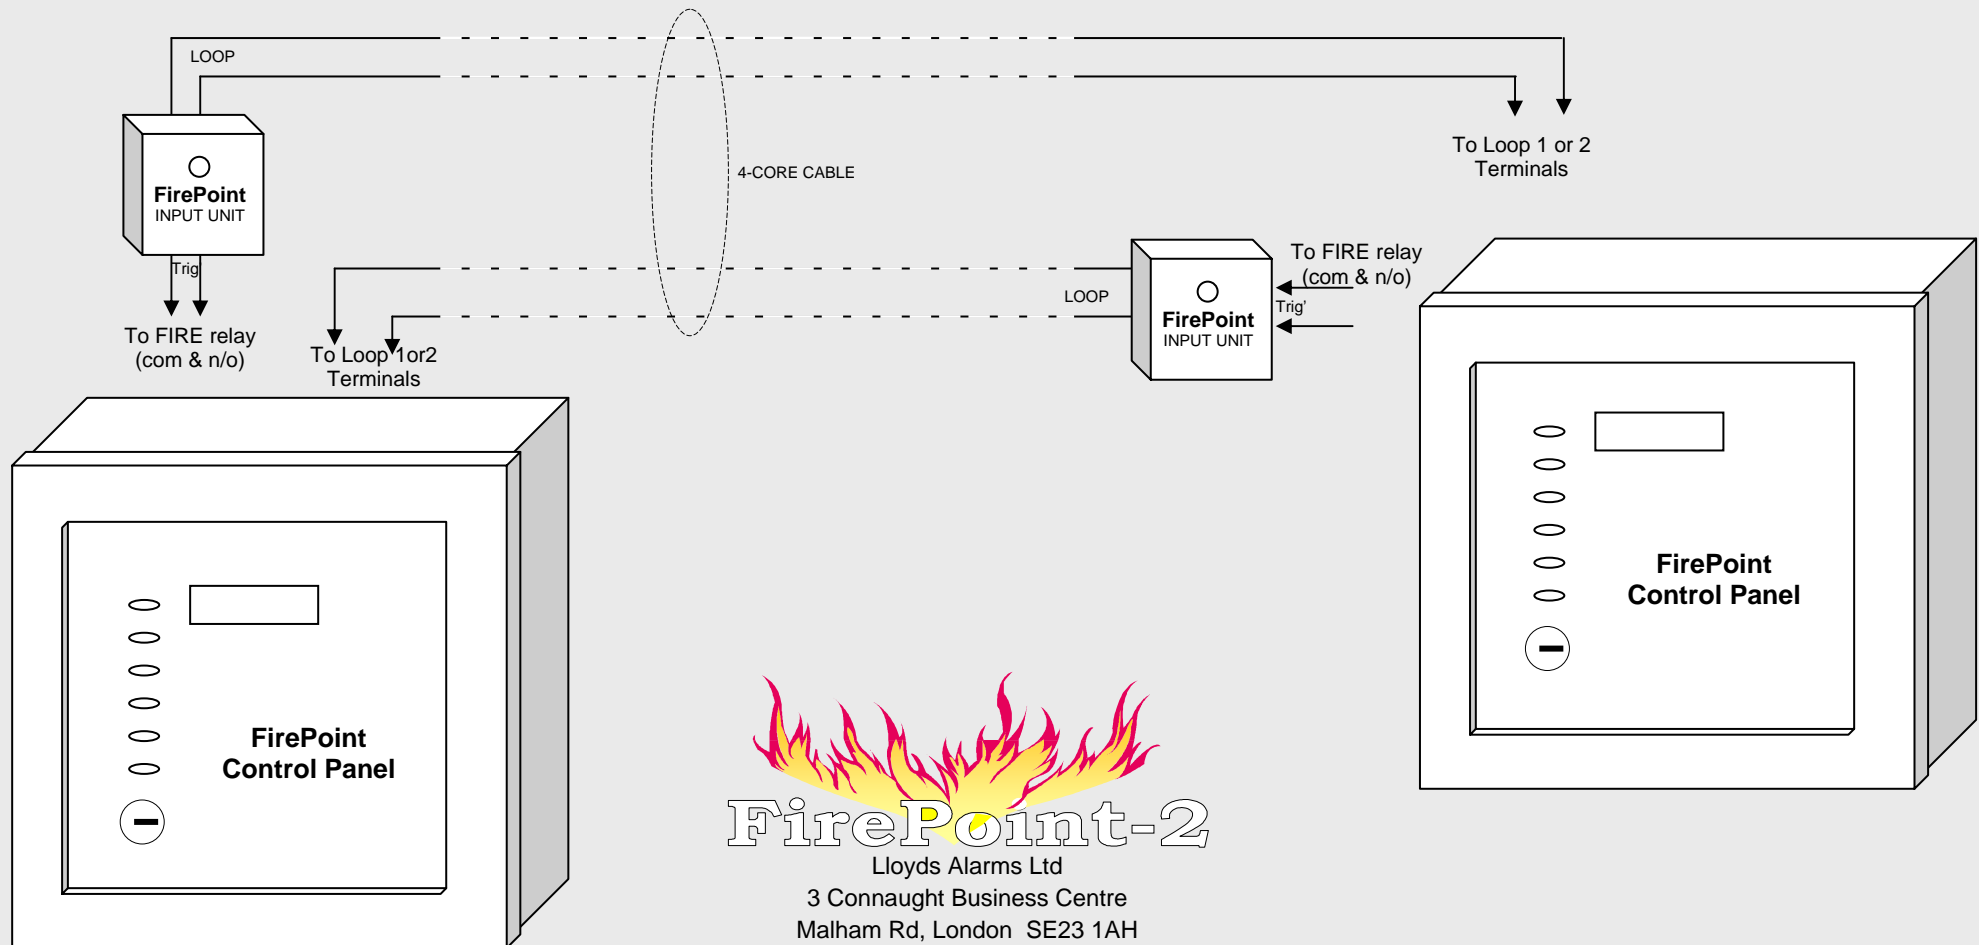

FirePoint-2

Lloyds Alarms Ltd

3 Connaught Business Centre

Malham Rd, London SE23 1AH

Phone. 020- 8699 8599 Fax. 020- 8699 9290