

Interface Relay connections

The Firepoint Interface Relay module can be triggered by direct connection to either of the 2 loop's. When the Firepoint goes into fire condition the relay contacts will change-over, when the FirePoint is Silenced the relay will change back. The disadvantage of this method is that you aren't able to stop the relay operating every time the alarm sounds.

Alternatively, by connecting the relay as shown below it is disabled in "walk-test" mode, letting you sound the alarms without the relay operating.

